


<sup>\*1</sup> Approval acquisition for safety standards is under way. \*2 Derating is required for DC outputs. Refer to the product specification.

<sup>\*3</sup> Shutdown software (or UPS services) is required for Auto-shutdown.

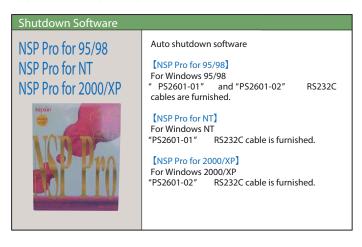

# **Optional**

# AC Power Cord

# PS2753



AC Power Cord Rating: AC 125V,12A Cord length: 1800mm

# Preventive Cable Clamp for AC Power Cord

# PS2734



The preventive cable clamp for eNSP series. It prevents AC power cord from being disconnected as well as power switch from being mistakenly operated.

\*For power cable, use "PS2753".

Power cables in the market may not fit.

#### ATX to AT Conversion Cable Harness

# PS5055



ATX to AT conversion cable harness required when an ATX power supply is used instead of an AT power supply. PS5046 ON/OFF switch can be used with PS5055 to manually turn on/off the power supply.

Cable length: 200mm

## ON/OFF Switch

# PS5046



ON/OFF Switch for use with PS5055 ATX to AT conversion cable harness.

Connectable with [PCSA-250-H101] and

[PCSA-250-H101] and [PCSA-250-H101] and [PCSA-250-H120].

Cable length: 500 mm

#### ON/OFF Short Connector

# PS5077



Always-On connector employed with ATX AT converting harness for [PS 5055].

Connectable with [PCSA-250-H101] and [PCSA-250-H120].

Please use this product when unnecessary to use switch operation.

# Always-On ATX connector (20P 14 Pin short)

# PS5073



ATX output connectors (20 Pin) that shorten 14th Pin (PS\_ON).

Please use the product when you would like to always-On the ATX power supply by AC input.

Length of harness: 100mm

#### ATX 12V Conversion Connector

# PS5105 PS5105-02



Converts the connector for peripherals into a 12V power connector.

### 【PS5105】



# RS232C Cable

# PS2601-01 PS2601-02



RS232C cable for PC shutdown control by Nonstop Power Supply with RS232C interface.

Cable length: 500mm

# [PS2601-01]

For Windows 95/98, NT [PS2601-02] For Windows 2000, XP

\*Nonstop power supply with RS232C func-

#### Shutdown Software

# NSP Pro for 95/98 NSP Pro for NT NSP Pro for 2000/XP



Auto shutdown software

### [NSP Pro for 95/98]

For Windows 95/98

" PS2601-01" and "PS2601-02" RS232C cables are furnished.

#### [NSP Pro for NT]

For Windows NT

"PS2601-01" RS232C cable is furnished.

### [NSP Pro for 2000/XP]

For Windows 2000/XP

"PS2601-02" RS232C cable is furnished.

# Automatic Startup Board

# PS2637



PS2637 enables an ATX power supply to be started up automatically when the AC input is turned on. Thereby, PC can boot up in unmanned environment without manually operating Power soft-key.

# Removable Output Harness Listing

The following products are equipped with output configuration in form of multi-pin connector to correspond to various types of output cable harnesses.

Please select appropriate output cable harness from the list shown below.

(Output cable harness is optional for these power supplies listed below.)

(Output cubic numess i	s optional for these po	ower supplies listed below.)  Type No. of power supply													
Port	connector type	Type No. of removable output harness	\display \text{q}	800 CON 18	A So	North Special	, sold the				7	-	Story &	\$ 80 C	and a standard and a
		WH-M2024-500									_		_		
MAIN	Main (20Pin)	WH6113-13	_	1 cable	-	1 cable	-	1 cable	-	1 cable		1 cable	-	1 cable	
Connecting port to the removable harness with motherboard connector (20 Pins, 24 Pins)		WH-M2022-500	_	Able to connect 1 cable	-	Able to connect 1 cable	-	Able to connect 1 cable	_	connect	Able to connect	connect 1 cable		Able to connect 1 cable	
	Main (2890)	WH-M2424-500								Able to connect 1 cable		Able to	-	Able to	
		WH6113-12	_		-		-		_				-		
Connecting port to the removable harmess with 12V output connector such as +12V connector (4 Pins), processor connector (8 Pins), and PCI-E connector.	12V	WH-V0408-500		cable		cable		cable		cable		cable	-		
	Processor	WH-V0808-500		Able to connect 1 cable		Able to connect 1 cable		Able to connect 1 cable		Able to connect 1 cable		Able to connect 1 cable	-		
	PCI-E	WH-VG208-500		Able to		Able to		Able to		Able to		Able to	-		
Connecting port to the removable harness, which has connectors for peripherals such as HDD and FDD.		WH-PP610-850		cable		cables		cable		cable		cable		cable	
	S-ATA	WH-PS610-850		Able to connect 1 cable		Able to connect 2 cables		Able to connect 1 cable		Able to connect 1 cable		Able to connect 1 cable		Able to connect 1 cable	
	S-ATA	WH-PS710-850		Able to		Able to		Able to		Able to		Able to		Able to	
Connecting port to the removable harness, which has connectors for signal such as Non-Stop power supply and Fan signals.  * The use of signal connector is mostly subject to motherboard customization.	SIG-1	WH-S0610-500			-		-		-		-		-		
	SIG-2	WH-S0610-500-01		Able to connect 1 cable	_	ole	-	ole	ple –	e l	-	əle	-		
		WH-S0603-500	_			ect 1 cal		ect 1 cal	_	ect 1 cal		ect 1 cal	-		
	SIG-3	WH-S0310-500		to conn	-	Able to connect 1 cable	_	Able to connect 1 cable	-	Able to connect 1 cable	_	Able to connect 1 cable	-		
		WH-S0303-500	-	Able		Able		Able	-	Able		Able	-		
	SIG-4	WH-S1616-500	-		-		-			Ш	-		-		

\*Able to connect only for PC1U-300P-E2S

# Removable output harness set Output harness set is also available.

Type No.: WHS2828

This product includes:

WH-M2024-500:1pc. WH-M2424-500: 1pc. WH-V0808-500:1pc. WH-VG208-500:1pc. WH-PP610-850:1pc. WH-PS610-850:2pcs.

# Port position

Connect removable harness to the following port.

Connecticinovable	idiffess to the following	ig port.									
Power supply type no.											
ePCSA-500P-X2S eNSP3-450P-S20-H1V eNSP4-500P-SA0-H1V	ePCSA-650P-E2S	PCSF-350P-X2S	pNSP2U-550P-AAS	PC1U-300P-E2S PC1U-400P-E2S	PCFL-180P series PCFD-180P-X2S fNSP9-180P-D2S						
	MAIN HD HD 127	o 12V HD MAIN M	TIZY HO MAIN	o 12V HD MAIN o	NAMA						